

HS-2410W Series 2" Printer Jumper Setting

● SOFTWARE SWITCH 1:

There is no hardware Dip Switch for HS-2410W Series 2" Printer.

SWITCH 1	FUNCTION
1	Reserve
OFF	
ON	
2	Reserve
OFF	
ON	
3	Cut Paper after Cover Return
OFF	Enable
ON	Disable
4	Full Cut Paper
OFF	Enable
ON	Disable
5	Busy condition
OFF	Enable
ON	Disable
6	Before Cut Paper
OFF	Normal Cut
ON	Cut and without paper feed
7	Auto cutter
OFF	Enable
ON	Disable
8	USB condition
OFF	Zero packet
ON	NAK packet

● SOFTWARE SWITCH 2:

SWITCH 2		FUNCTION
1		Reserve
OFF		
ON		
2	3	Print Speed
OFF	OFF	80mm
OFF	ON	60 mm/s
ON	OFF	100 mm/s
ON	ON	50 mm/s
4		Paper Feed Back
OFF		Disable
ON		Enable
5		Reserve
OFF		
ON		
6		Reserve
OFF		
ON		
7		Reserve
OFF		
ON		
8		< CR > Auto Line Feed
OFF		Disable
ON		Enable

● SOFTWARE SWITCH 3:

SWITCH 3			FUNCTION
1			UPOS Write
OFF			Disable
ON			Enable
2			Beep Sound after Cut paper
OFF			Disable
ON			Enable
3	4	5	Print Density
OFF	OFF	OFF	100%
ON	OFF	ON	110%
OFF	ON	OFF	120%
ON	ON	ON	130%
6			Reserve
OFF			
ON			
7			Thai Font mode
OFF			1 PASS
ON			3 PASS
8			Cover Open Message
OFF			Disable
ON			Enable

● SOFTWARE SWITCH 4:

SWITCH 4		FUNCTION
1		Reserve
OFF		
ON		
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Reserve
OFF		
ON		

※ JP4: Use for Firmware download.

JP4	FUNCTION
Open	Normal Mode
Short	Firmware download mode